Yealink VCR20 Datasheet

Introduction


You can use the VCR20 Remote Control to control the Yealink endpoint. VCR20 uses two AAA batteries (1.5V).

VCR20 Compatibility

For the VCR20 compatibility, refer to Rooms Accessories Compatibility Lists.

Yealink VCR20


For MeetingBar A20/A30

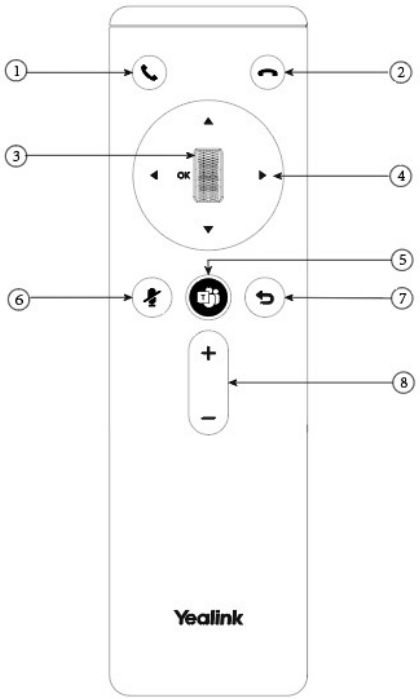

No.	Item	Description
1	Answer Key	Make or receive calls
2	End Key	End a call or exit the current meeting.

3	Scroll Wheel (OK Key)	- Long press the **Teams Key** to bring up the sidebar, enter **Camera Control**, and swipe up to zoom in the camera image - Long press the **Teams Key** to bring up the sidebar, enter **Camera Control**, and swipe down to zoom out the camera image - Press OK to confirm.
4	Navigation Key	Long press the **Teams Key** to bring up the sidebar, enter **Camera Control**, and pan and tilt the camera to adjust the viewing angle.
5	Teams Key	- On the home screen, press the Teams key to join the first meeting on the meeting list. - On the home screen or in a meeting, press and hold the Teams key for 5 seconds to open the sidebar.
6	Mute Ke	Mute or unmute the microphone.
7	Return Key	Return to the previous level.
8	Volume Key	Turn up/down the volume.

For MVC/ZVC/MeetingBar A20/A30

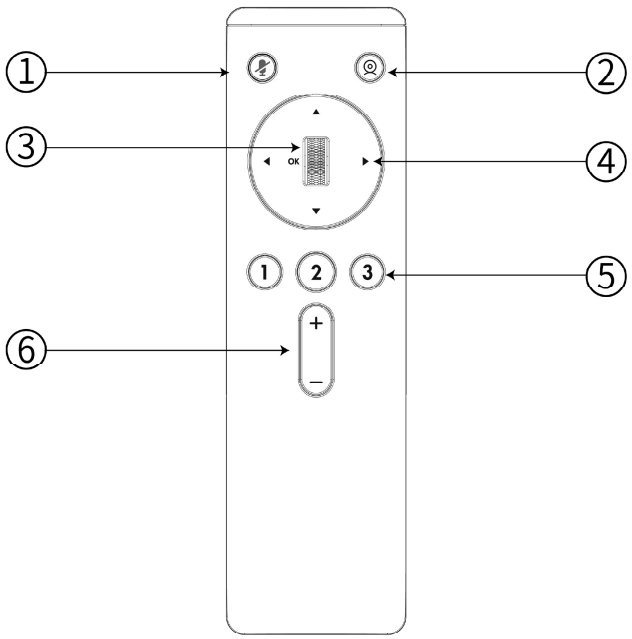

No.	Port Nam	Description

	e	
1	Mute Key	Mute or unmute the microphone.
2	Tracking Feature Key	Press and hold the **Tracking Feature** key to select a desired tracking mode. For which Yealink UVC Cameras/Yealink Intelligent Cameras support tracking features, refer to Rooms Supported Features List for details.
3	OK Key	• Swipe up to zoom in on the camera image. • Swipe down to zoom out the camera image. • Press OK to confirm.
4	Navigation Key	Pan and tilt the camera to adjust the viewing angle.
5	1/ 2/ 3 key	• Press and hold the number key to add/update the preset position. • Press the number key to apply for the preset position.
6	Volume Key	Turn up/down the volume.